 




This Module Will Address

Learn the steps to use the Firestone Ag Tire Pressure Calculator on your mobile device

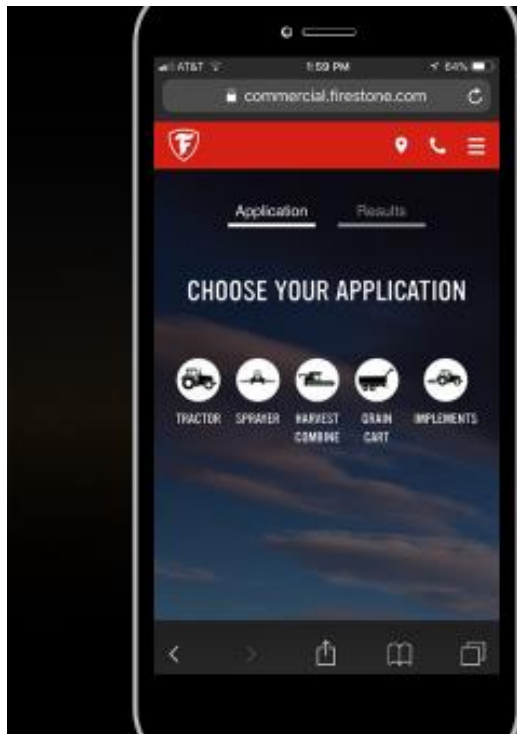

 


Website

Step 1

Go to:

<https://commercial.firestone.com/en-us/agriculture/resources/tire-pressure-inflation-calculator>

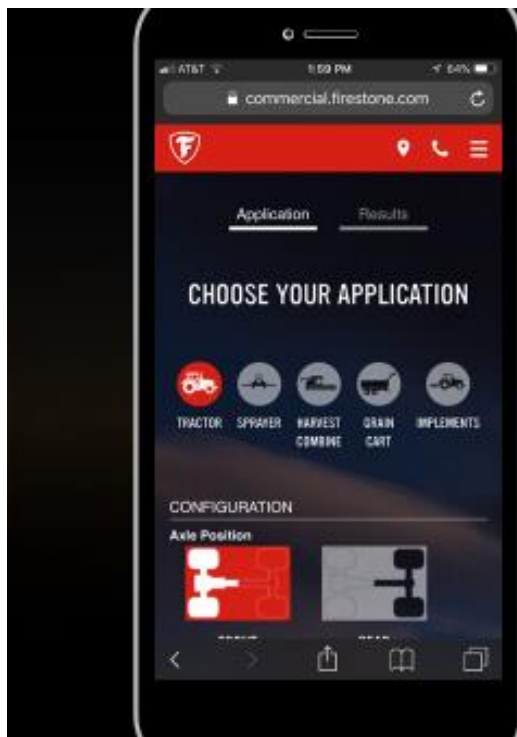

Tractor & Sprayer

 
Select icon for application type



Axle Position

Select Axle


Select Tire Setup

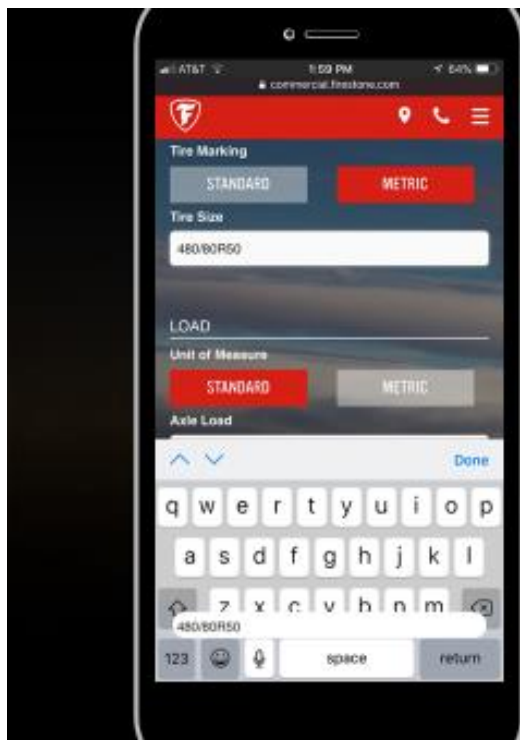

Size

Select Tire Marking

 Enter Tire Size

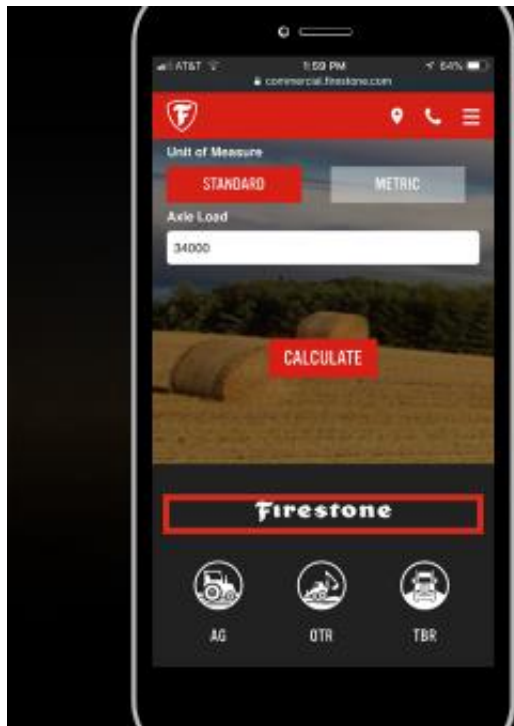


Load

Select Unit of Measure

Tap on the input field

Enter Load Amount

 The comma does not need to be entered for the load

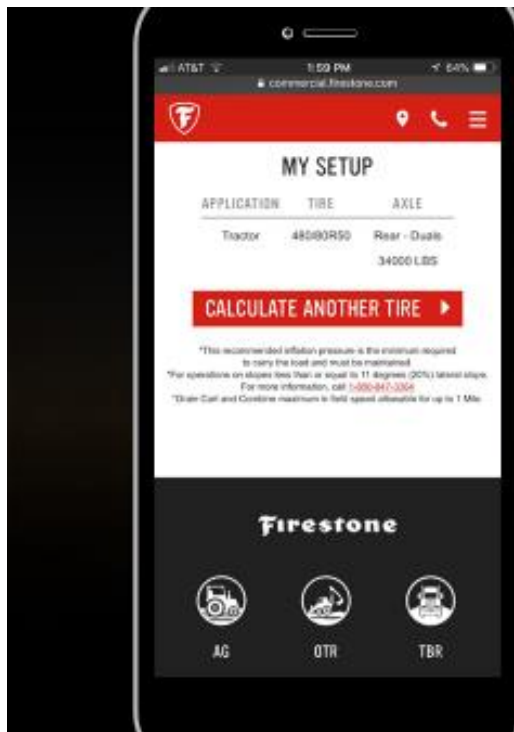

Results

 
Load exceeds tire capacity

Two Options:

Change the tire configuration

Change tire to an IF or VF

Tap the Calculate Another Tire button

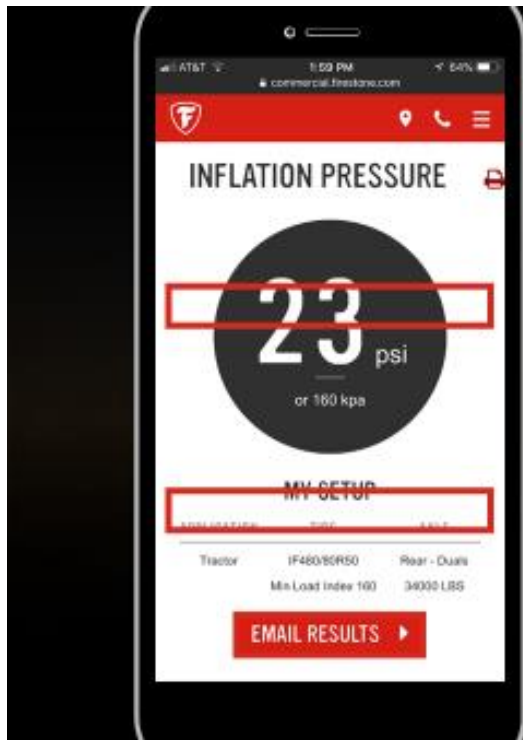

Change to IF Tires

 
Change tire to an IF tire

Standard 34000 lbs

The comma does not need to be entered for the load

Tap Calculate

You may email results by tapping Email Results

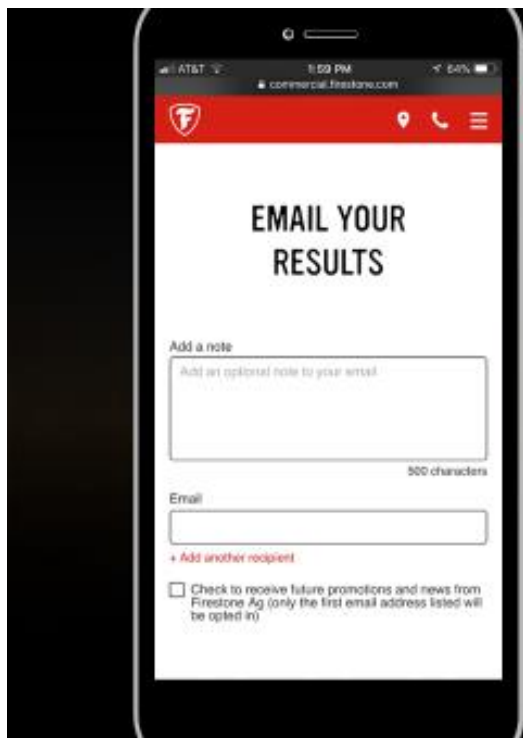

Change to Triples

Tap Calculate Another Tire

Tire Setup type - Triples

 
Tap Calculate

Email Results



Harvest Combine Front


Select Harvest Combine

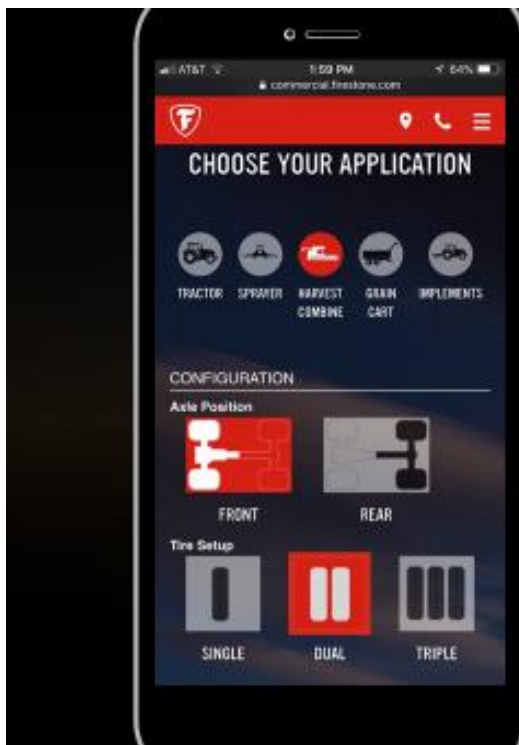

Axle Position & Tire Setup


Tap Front

 Select Dual

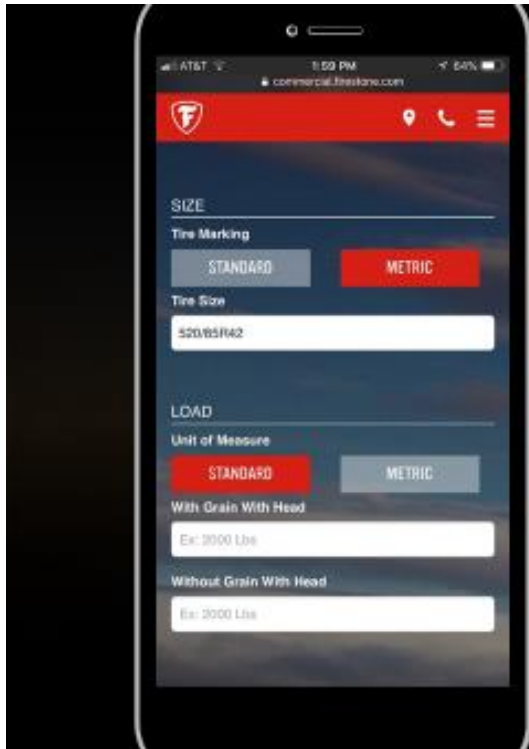


Size

 Select Tire Marking & Tire Size

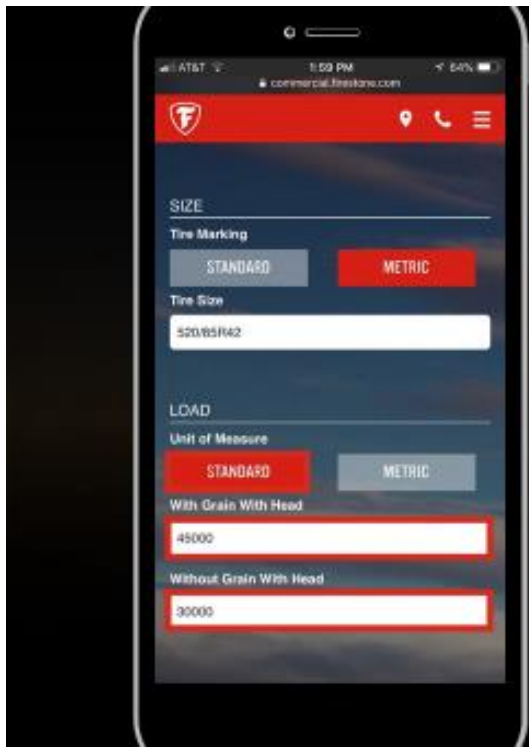

Load

 Select unit of measure
Tap input field for axle load
The comma does not need to be entered for the load

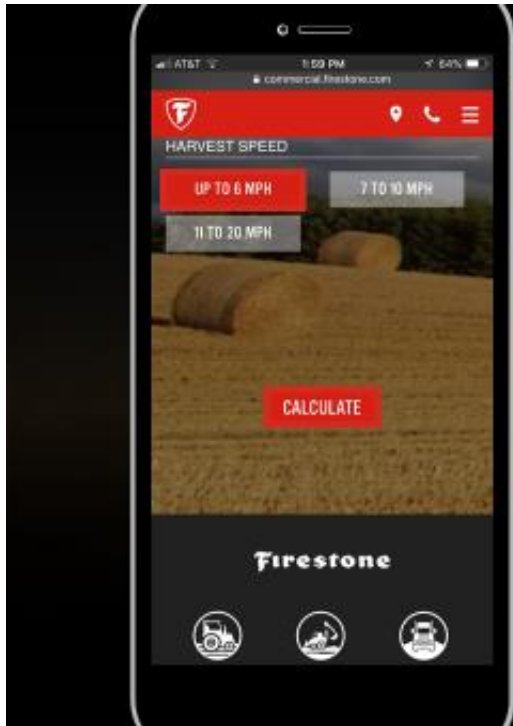


Harvest Speed

Enter Harvest Speed
Tap Calculate




Results

 Tap Email Results button

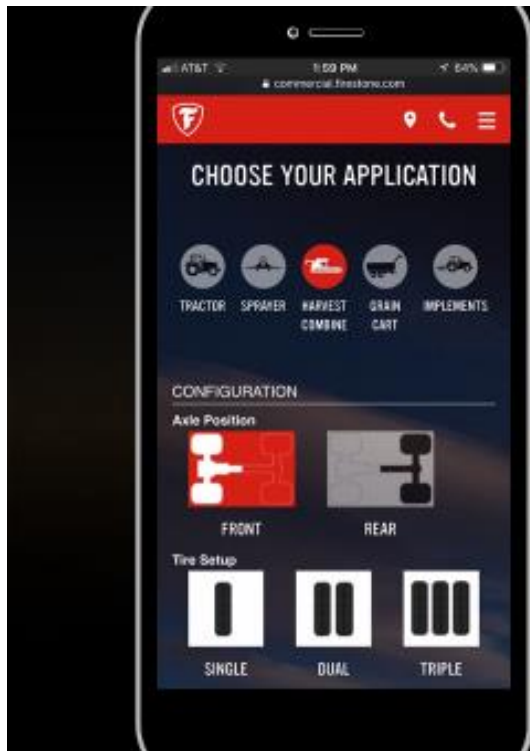


Harvest Combine Rear

 Select Harvest Combine icon

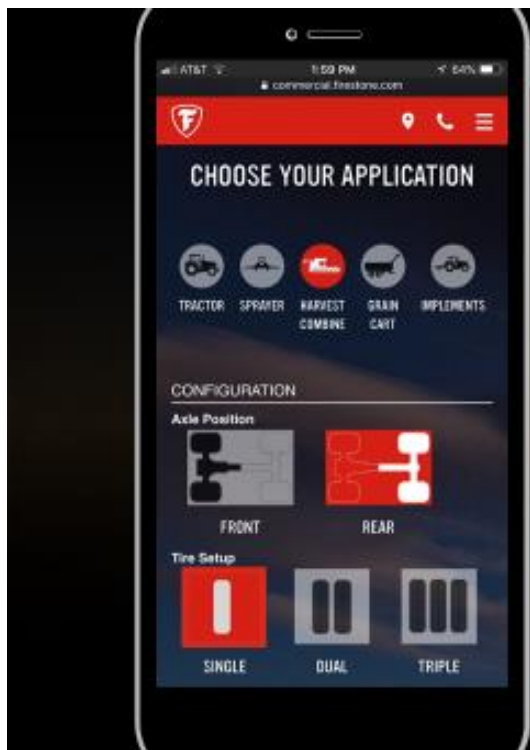


Axle Position & Tire Setup

 Tap Rear Axle
Select Tire Setup

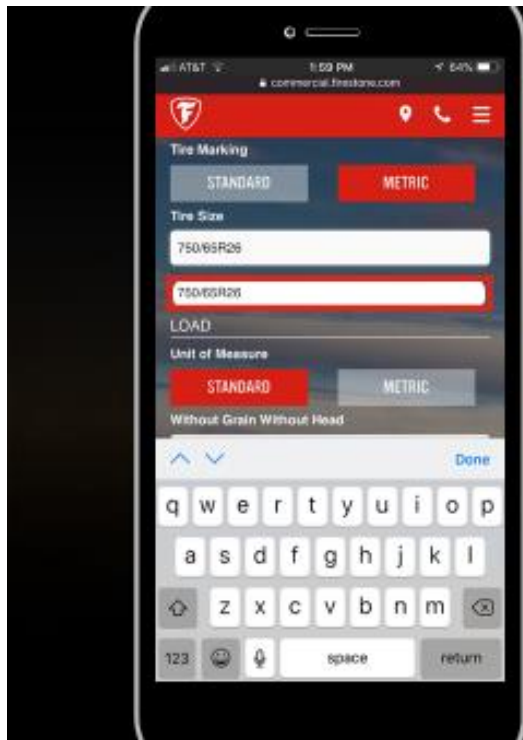


Size

 Select Tire Marking & Size
Enter Tire Size

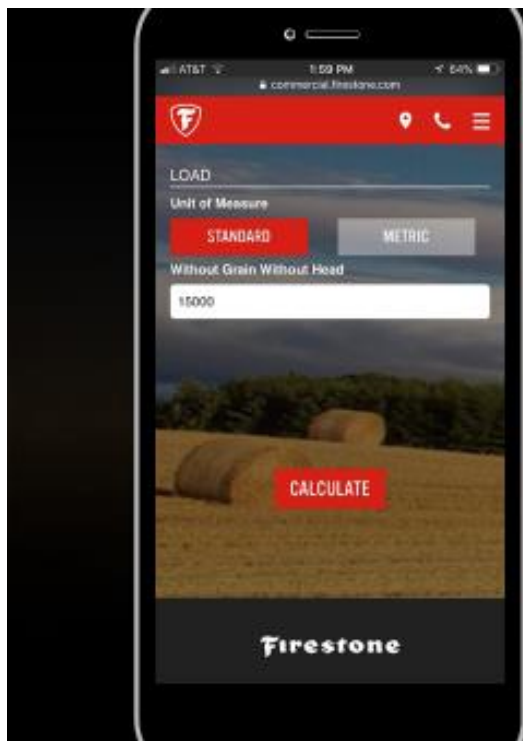


Load

 Select Unit of Measure
Tap Input Field for Axle Load
The comma does not need to be entered for the load

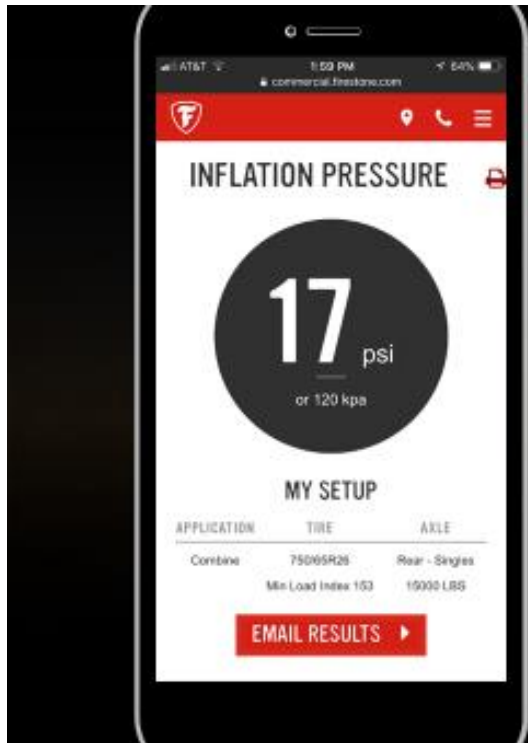


Results

 Tap Email Results button

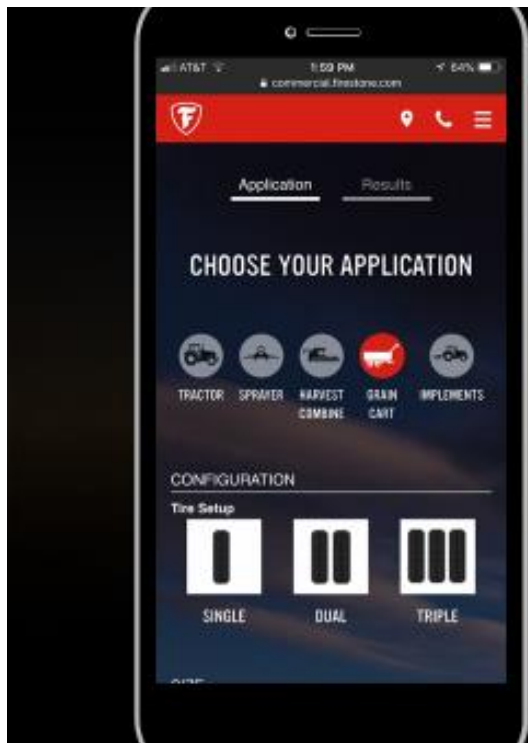


Grain Cart

 Select Grain Cart icon

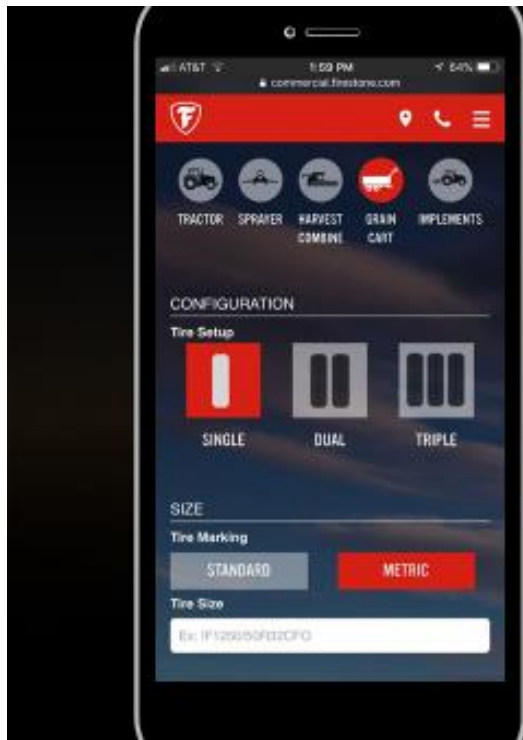


Tire Setup

 Select Tire Setup
Select Singles

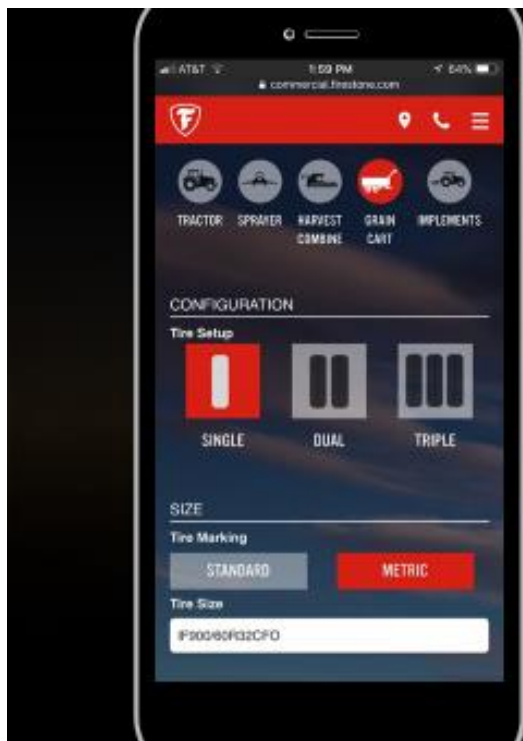

Size

 Select Tire Marking & Size
Enter Tire Size

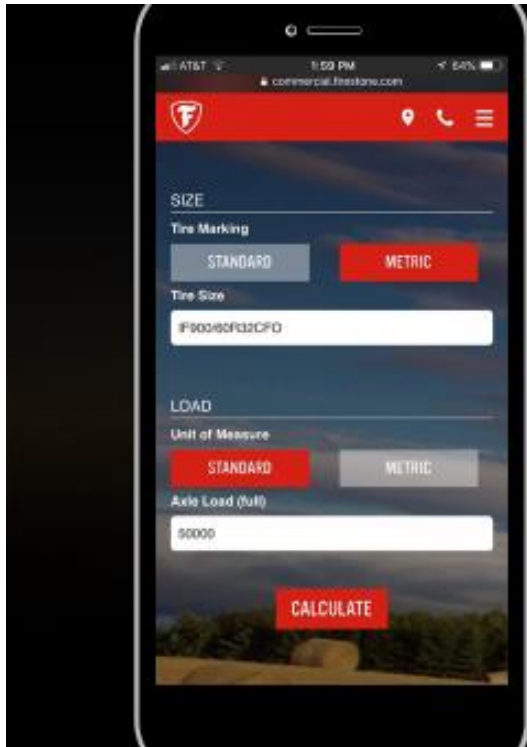


Load

Select Unit of Measure


Tap Input Field for Axle Load

 The comma does not need to be entered for the load

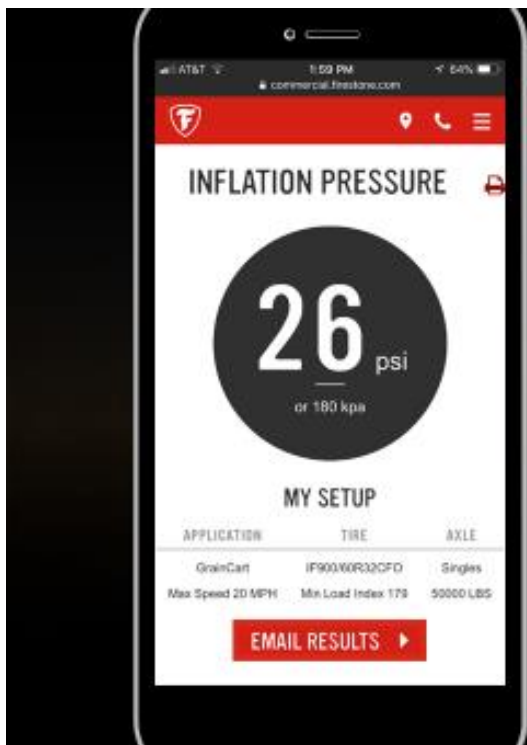


Results

 Tap Email Results button

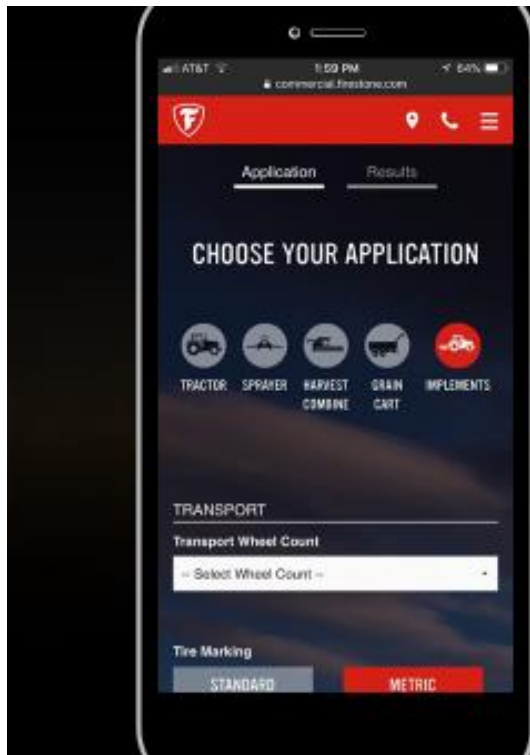


Implements

 Select Implements icon

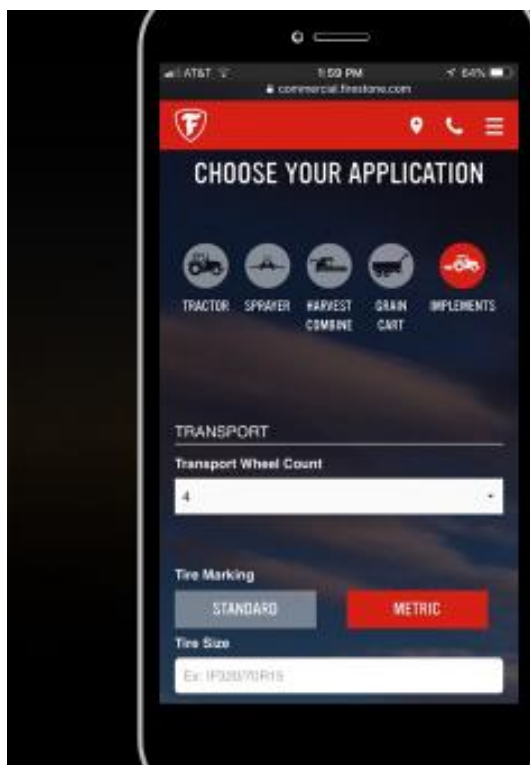


Transport

 Select Transport Wheel Count
Input Wheel Count

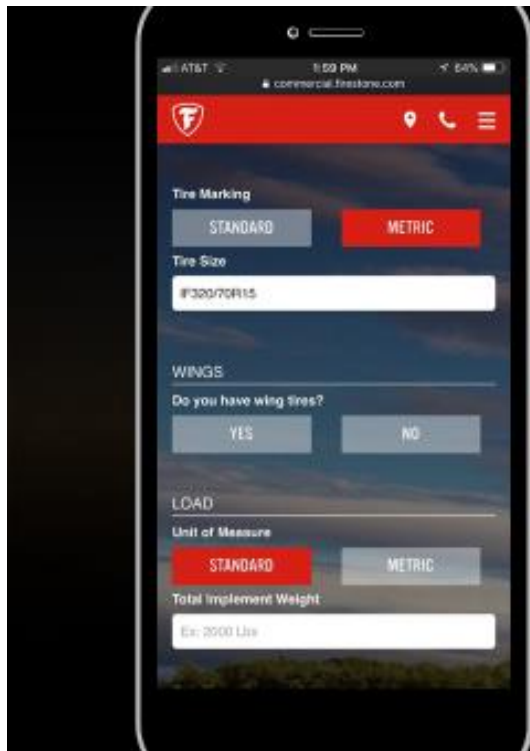


Size

 Select Tire Marking & Size
Enter Tire Size

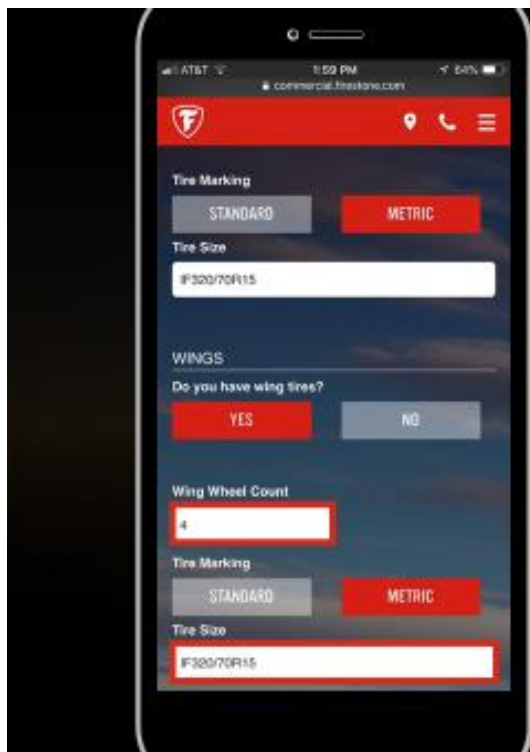

Wings

 Select Yes
Enter Tire Size

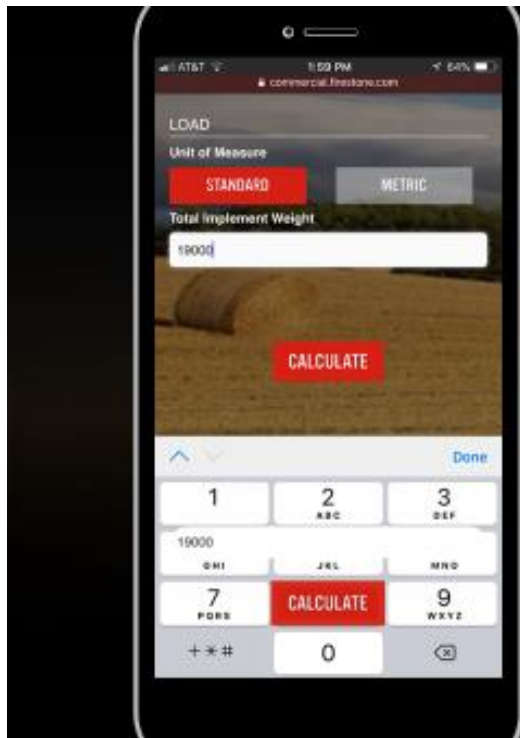


Load

Select Unit of Measure


Tap Input Field for Total Implement Weight

 The comma does not need to be entered for the load

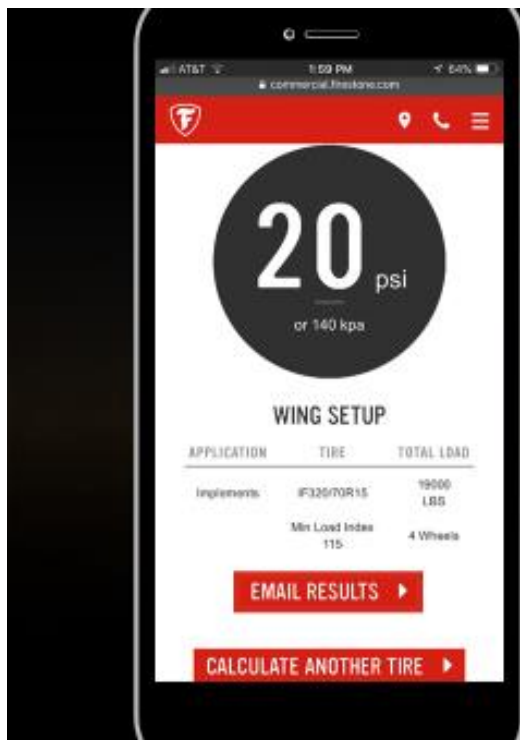


Results

 Tap Email Results button

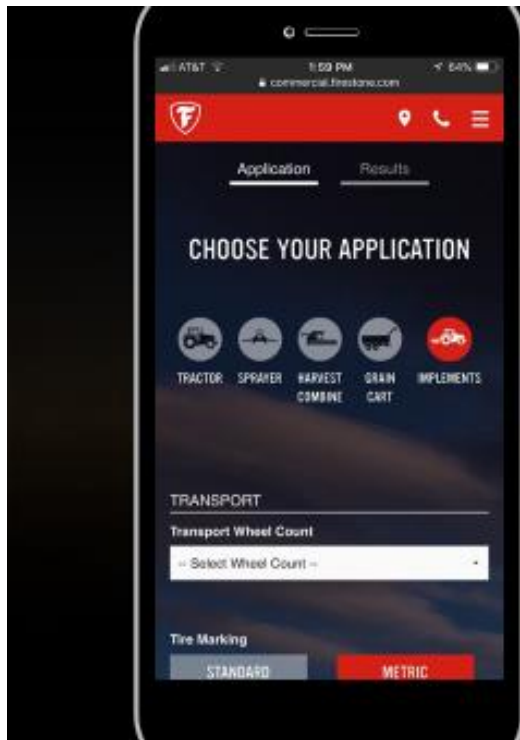


Implements

 Select the Implements Icon

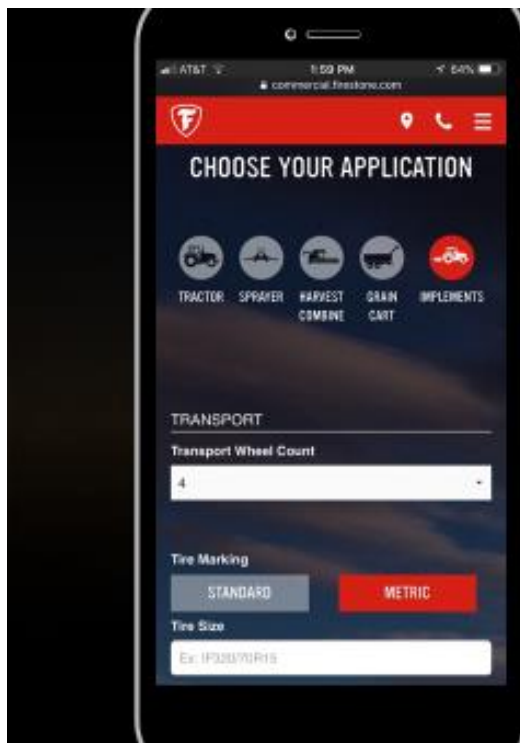


Transport

 Select Transport Wheel Count
Input Wheel Count

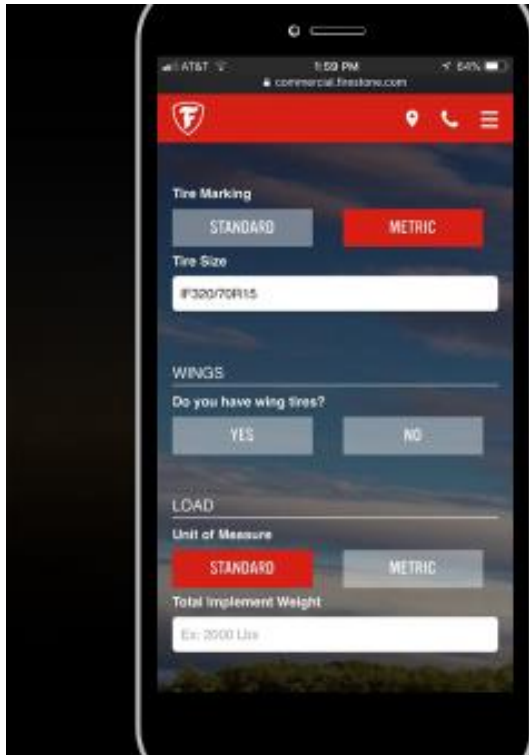


Size

 Select Tire Marking & Size
Enter Tire Size

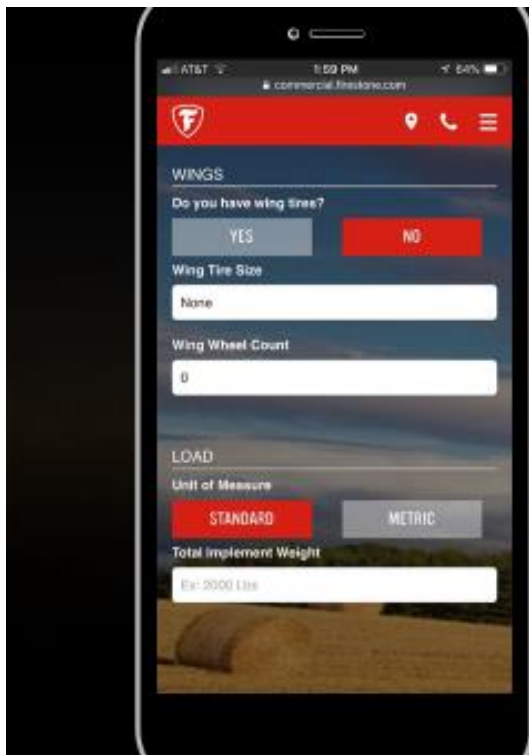

Wings

 Select No
Leave Wing Tire Size and
Wing Wheel Count blank

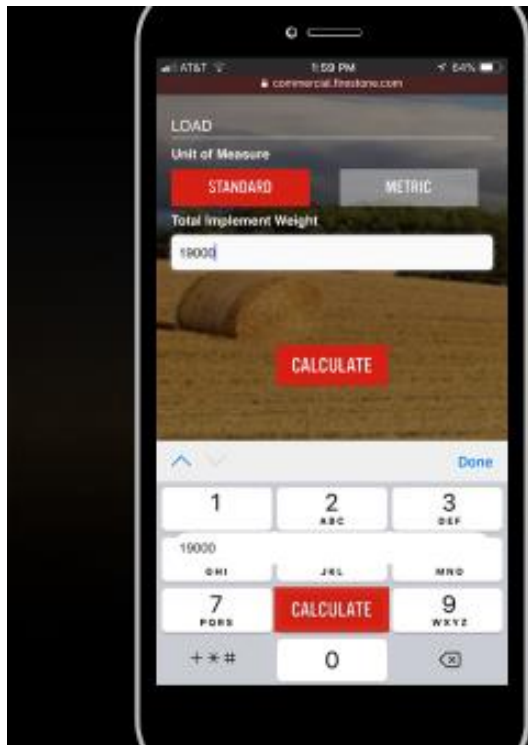


Load

Select Unit of Measure

Tap Input Field for Total Implement Weight

 The comma does not need to be entered for the load

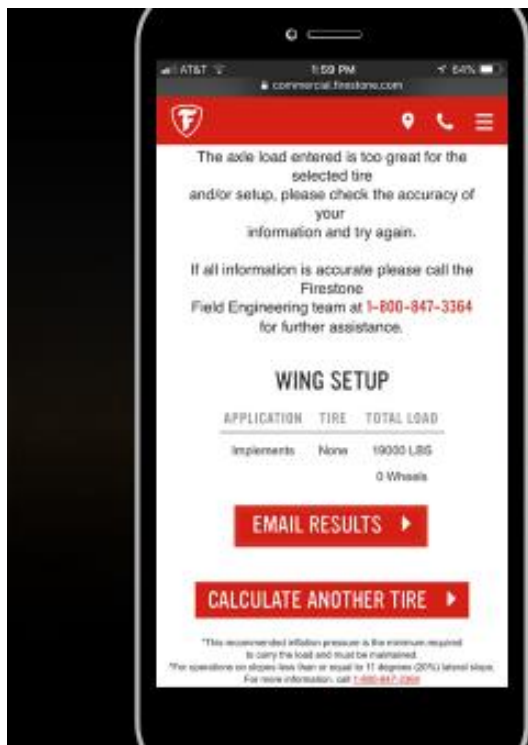


Results

Tap Email Results button



iPhone Bookmark

 Tap the Open Box Icon
Tap Add to Home Screen

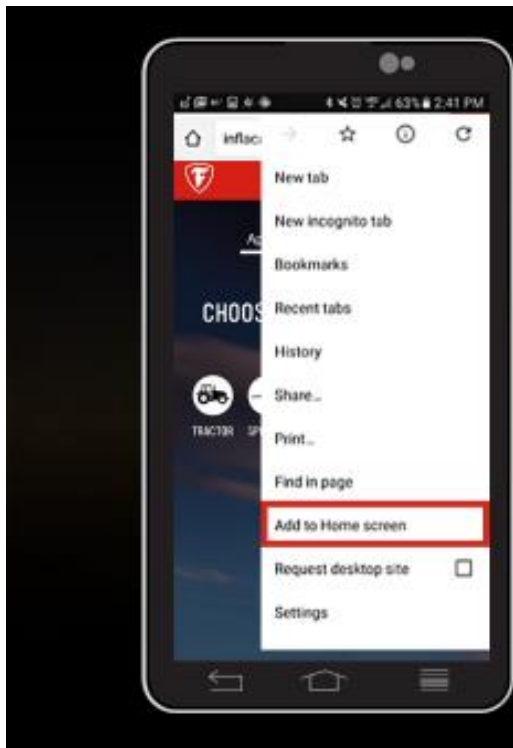

Android Bookmark

Tap Menu Icon
Select Add to Home Screen



Technical Questions? Firestone Farm Tire Field Engineering
1-800-847-3364